



Ver. 1A

Quick Installation Guide

Model # AWLL3025



- Package Contents:**
- USB Adapter
 - USB Extension Cable
 - Driver & Utility CD
 - Quick Installation Guide



Section 1

Install Utility Software


Note: Before installing the utility software, **DO NOT** insert the USB adapter into your computer. If the adapter is inserted already, Windows will detect the adapter and request for a driver. Click **Cancel** to quit the wizard and remove the adapter from your computer.

Step 1 Insert the provided Driver and Utility CD into your CD drive.


Step 2 Click **Install Driver** from the Setup menu.

Note: If the Setup menu does not appear automatically, go to **Start, Run**, type **D:\autorun.exe** (where **D** is the letter of your CD drive) and click **OK**.

Step 3 When the welcome screen appears, click **Next**.

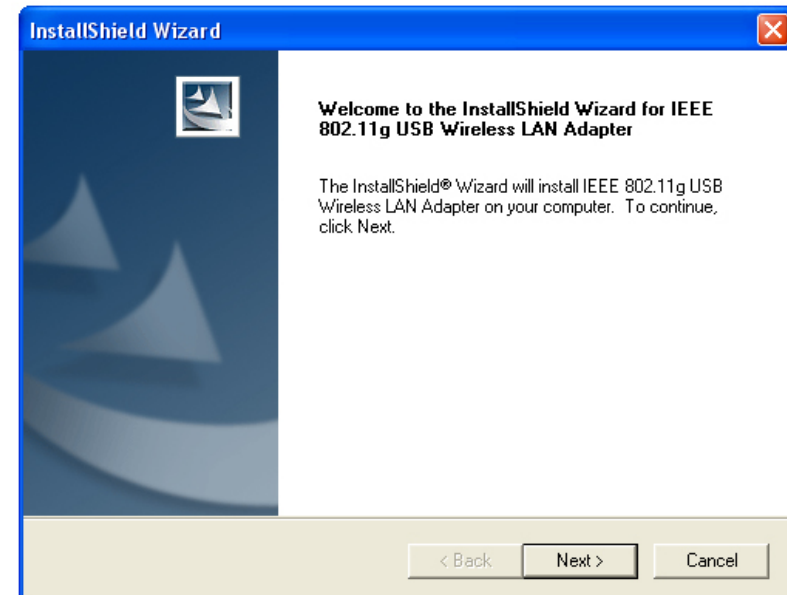

Step 4 Click **Next** to accept the default destination folder for the software or click **Browse** to manually select a different destination folder.

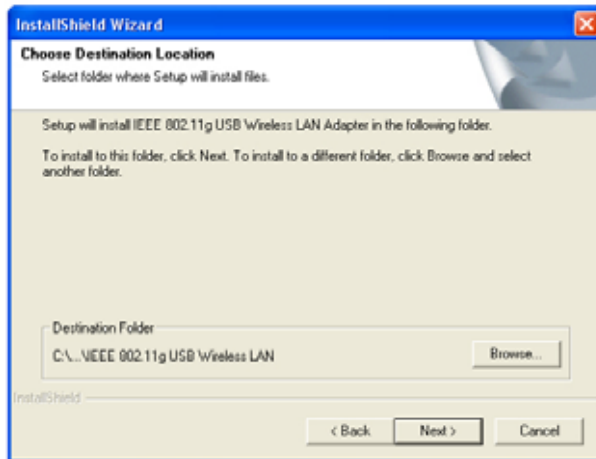

Step 5 For Windows XP, click **Continue Anyway** at the Windows Logo Compatibility screen.



For Windows 2000, click **Yes** at the Digital Signature screen.

Step 6 Remove the Driver & Utility CD from your CD drive and then restart your computer.

Section 2

Install Driver

Note: In most cases, Windows will automatically install the driver after the computer is restarted. If the Found New Hardware Wizard appears, follow the instructions below. The Found New Hardware Wizard will look different depending on your operating system. Follow the on-screen instructions to complete the installation. For Windows 98SE and ME users, you may be prompted to insert the Windows 98SE or ME CD during the driver installation. Be sure to have your Windows 98SE or ME CD ready.

Step 1 After the computer is restarted, insert the USB adapter into the USB port of the computer. If there is not enough room to insert the adapter directly to the USB port, you may use the supplied USB extension cable for more space.

Step 2 Select **Install the software automatically** and click **Next**.



Continue on Back



Step 3 For Windows XP, click **Continue Anyway** at the Windows Logo Compatibility screen.



For Windows 2000, click **Yes** at the Digital Signature screen.



For Windows 98SE or ME, insert the Windows 98SE or ME CD if prompted to do so and click **OK**.

Step 4 Click **Finish**. Restart the computer if you are prompted to do so.


Section 3

Configuring the USB Adapter


To open the utility, go to **Start, (All) Programs, IEEE 802.11g USB Wireless LAN Adapter, IEEE 802.11g USB Wireless LAN Utility**.

Note to Windows XP Users:

If you encounter the Wireless Zero Configuration dialog box, click **Yes** to enable the Wireless LAN Utility to configure your USB adapter.

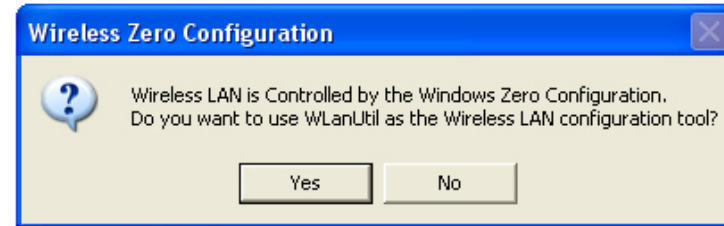

Step 1 Select the **SSID** of your wireless router/access point from the Available Network list and click on the **Connect this site** button.

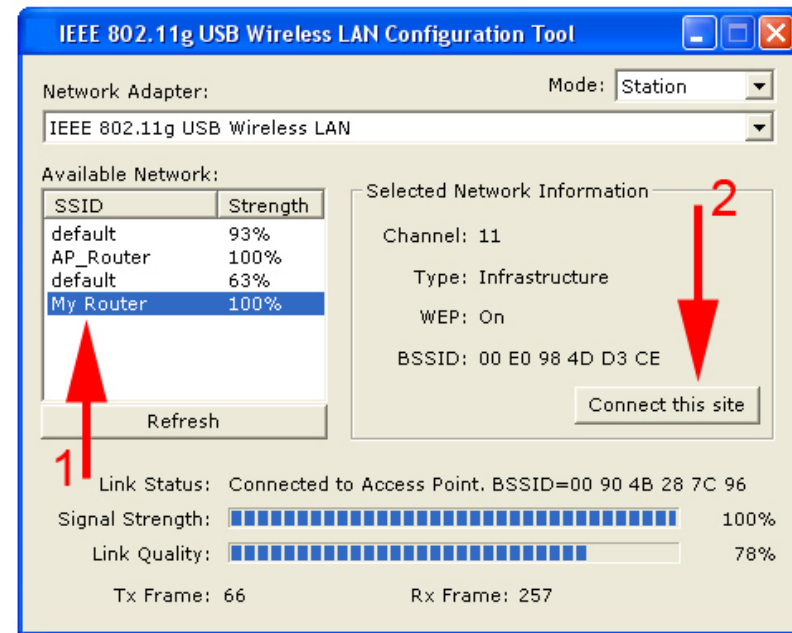

Step 2 Verify that the adapter has adequate **Signal Strength** and **Link Quality** and then restart the computer.

You have completed the configuration.

Section 4

Troubleshooting

A If the utility cannot be opened or it reports that the adapter is not found, uninstall the driver and utility and try installing again. You can also verify if the driver is installed properly in the Device Manager. For instructions on how to access the Device Manager, please refer to the User's Manual on the provided CD.

B If you do not see your wireless router/access point in the Available Network list, reset your wireless router/access point and click on **Refresh**.

C If WEP is ON, it means that the wireless router/access point has encryption enabled. Be sure to set the identical encryption settings on the USB adapter's utility as well. For information on how to configure the encryption settings, please refer to the User's Manual on the provided CD.

D If the adapter has adequate signal strength and link quality, but cannot access the Internet, verify that you are able to obtain an IP address from your wireless router/access point.

For Windows 98SE/ME

Step 1 Go to **Start, Run**, type **winipcfg** and click **OK**.

Step 2 Select the adapter from the drop-down menu and click **Release**.

Step 3 After the IP address is released, click **Renew**. You should get an IP address like **192.168.x.y** (where **x** and **y** are unique numbers assigned by your wireless router/access point). If you don't get an IP address, reset the wireless router/access point and then try **Renew** again.

For Windows 2000/XP

Step 1 Go to **Start, Run**, type **cmd** and click **OK**.

Step 2 At the command prompt, type **ipconfig/release** and press **Enter**.

Step 3 After the IP address is released, type **ipconfig/renew** and press **Enter**. You should get an IP address like **192.168.x.y** (where **x** and **y** are unique numbers assigned by your wireless router/access point). If you don't get an IP address, reset the wireless router/access point and then try **ipconfig/renew** again.

E You must have USB 2.0 compatible hardware and install the latest USB 2.0 driver from Microsoft in order to reach the data transfer rate of 54 Mbps. If your hardware is not USB 2.0 compatible or you don't have the latest USB 2.0 driver installed, you will not reach 54 Mbps.

For more advanced features and additional details, please refer to the User's Manual on the provided CD.

Section 5

Technical Support

E-mail: support@airlinkplus.com

Toll Free: 1-888-746-3238

Web Site: www.airlinkplus.com